










READ THE INSTRUCTIONS CAREFULLY BEFORE STARTING

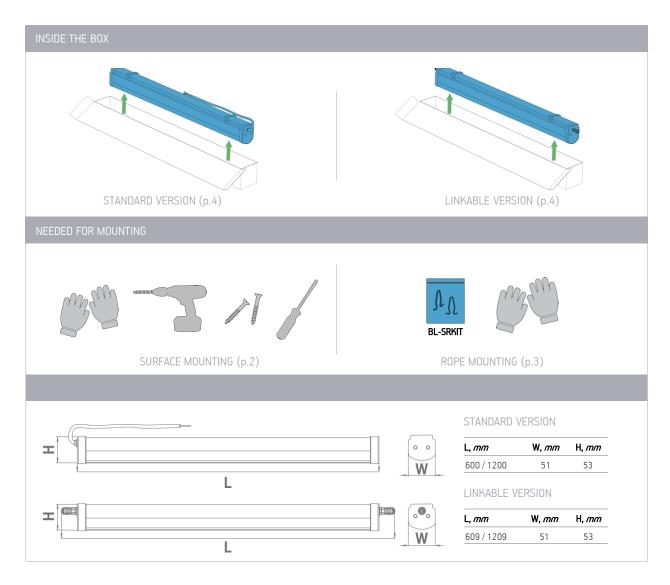

WARNING

- ! Turn power off before inspection, installation or removal.
- Properly ground electrical enclosure.
- · Perform installation in dry location only.
- Luminaire may fall down if not installed properly.
- · Avoid direct eye exposure to the light source while it is on.
- · For indoor use only.
- · Do not operate luminaire with damaged parts.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- The manufacturer shall not be liable for any damage resulting from inappropriate modifications to the luminaire or faulty installation.

If you have any questions, contact the manufacturer.

© 2020, All rights reserved BaltLED, UAB. Specifications are subject to change without notice.












1. MOUNTING

1.1. SURFACE MOUNTING

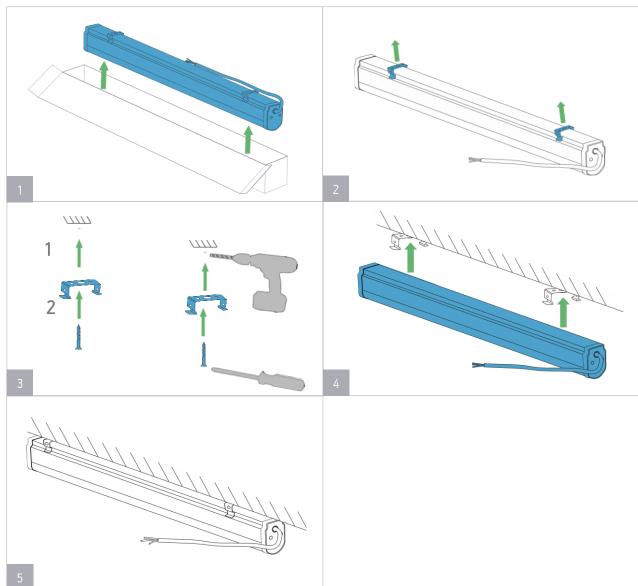












1. MOUNTING

1.2. ROPE MOUNTING

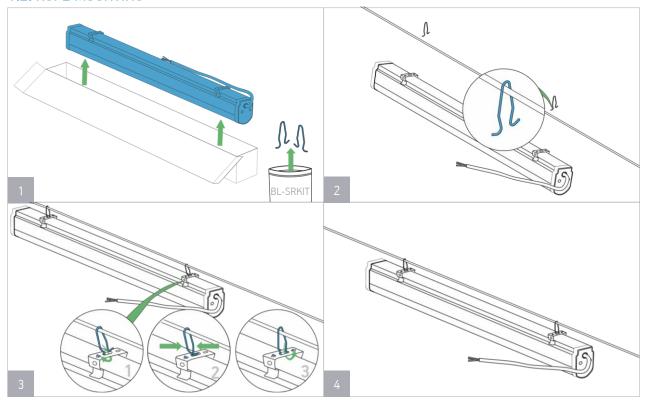













2. CONNECTION

2.1. STANDARD CONNECTION

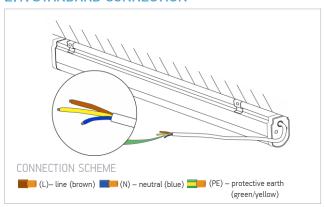

TRERON LUMINAIRES INSTALLATION GUIDE

2.2. LINKABLE CONNECTION

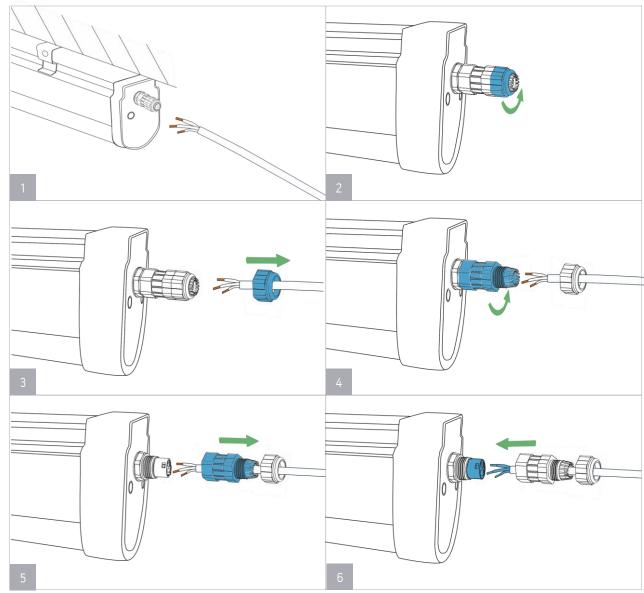

© 2020, All rights reserved BaltLED, UAB. Specifications are subject to change without notice.












2.2. LINKABLE CONNECTION

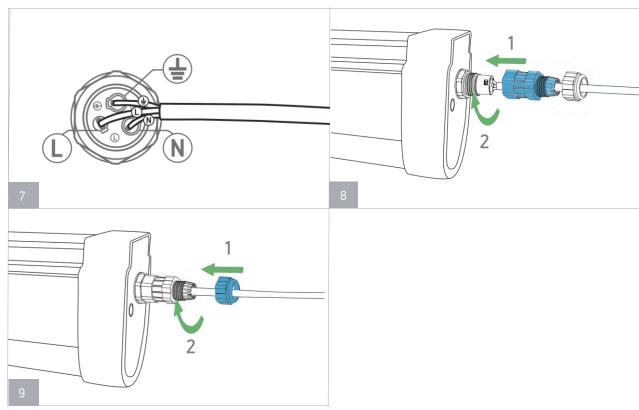

QUANTITY OF LUMINAIRES PER CIRCUIT BREAKER

SKU	LUMINAIRE QTY PER 16A TYPE C CIRCUIT BREAKER
BWLP-BL-060A120840E16	210
BWLP-BL-060A120840E16-TR	210
BWLP-BL-060A120840E20	160
BWLP-BL-060A120840E20-TR	160
BWLP-BL-120A120840E24	130
BWLP-BL-120A120840E24-TR	130
BWLP-BL-120A120840E32	100
BWLP-BL-120A120840E32-TR	100
BWLP-BL-120A120840E40	80
BWLP-BL-120A120840E40-TR	80